

VILLAGE HALL OVERHEAD HEATERS

Main overhead heaters for the hall are operated from the thermostat on the wall. The heater control is on the left hand wall as you enter the main hall

On entering the control will just show the current temperature:-



ONLY USE THE MIDDLE BUTTON. To switch on press middle button until “ON” is displayed on top left of screen:



The 6 overhead heaters will now be on but if you wish to check then go to bank of controllers to right of stage on the outside wall. They should be displaying a red light at the top of each mini controller



Red Lights at top can
just see them

The temperature control will be automatic.

To switch off at end of the booking just use the middle button and press two or three times until the following is seen:-



OFF indicator