

Claresholm Community Centre

Dishwasher Instructions



With the door in the down and closed position, press the power button to start.

The fill cycle will begin, and the screen will say **FILL**.


Select "1" for normal serving ware; 2 or 4 for pots & pans. When the **FILL** stops, slowly lift the door (to avoid water spraying) and slide in a rack of dishes.

When the door is brought down again, the wash will begin. The tank temperature is shown on the screen


along with the word **WASH**. Each **WASH** cycle is

followed by an automatic **RINSE** cycle (with the temp and word shown on the screen). The machine will stop when done this cycle, and you can raise the door, slide the rack out, and load another rack. When the door is lowered, the cycle begins again. When you are done, press the OFF button, drain and clean the washer.

LOADING: Scrape all of the dishes prior to placing them in the racks as shown below. For optimal cleaning, do not overload the racks.

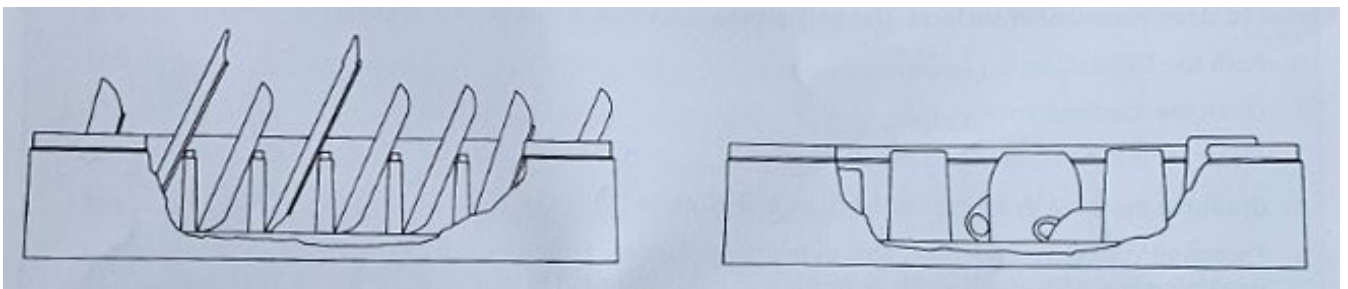

CLEANING: Push the OFF button. Raise the door. Drain the machine by lifting the drain lever. Remove and clean out the strainer bucket and pan.

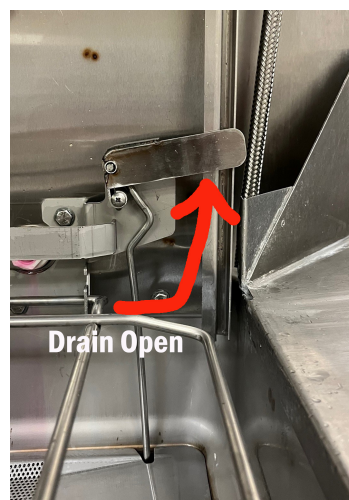

Leave the door in the upright position when done.