

 
## Fraser Village Hall

# Using the Projector to play a DVD

Please follow the procedure below when turning off the projector **to prevent serious damage.**


Please do not leave the projector on the same image for a long time to prevent the image being burnt in. Press “**Display Off**” / “**Display On**” to prevent damage.

**STEP 1** - Turn on the Main switch and **wait 5 seconds.**

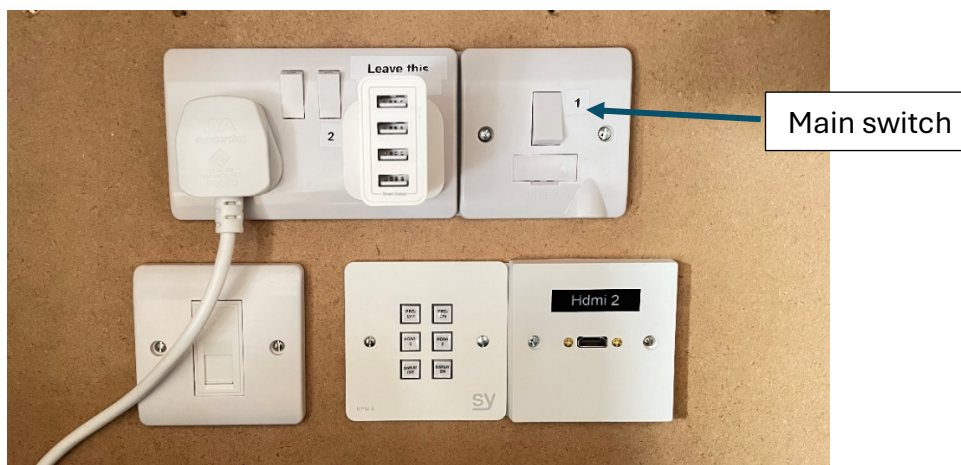

**STEP 2** - Press “**PROJ ON**” – this automatically lowers the screen and turns on the projector. **WAIT** until the screen is fully lowered and the projector is on.

**STEP 3** - Press “**HDMI 1**”.

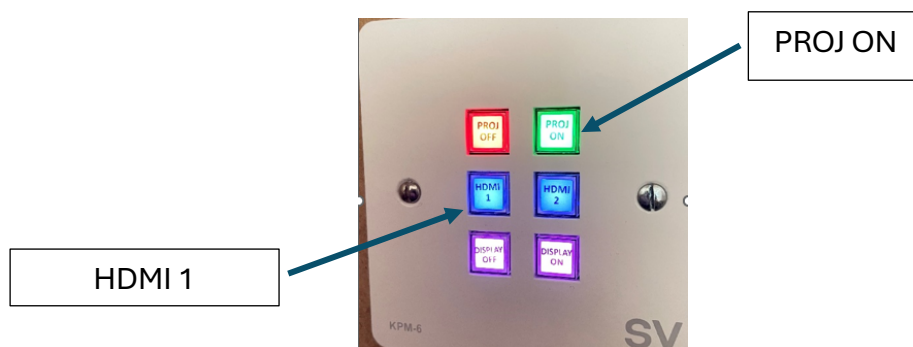

## To play the DVD

**STEP 4** – Check the amplifier and DVD player are turned on. Green = on. Red = standby.



**STEP 5** - Turn all volume controls down to lowest setting, and set **“CD PLAYER”** volume control to desired setting.

**STEP 6** - Insert DVD and press play.

Tip – During DVD play, pressing STOP will pause the DVD, and return to the same place. Pressing Pause also pauses the DVD, but will time out and will then return to the beginning.


## Shutting down

**STEP 7** – Eject and remove DVD from player.

**STEP 8** – Press **“DISPLAY OFF”** and wait 2 minutes.

**STEP 9** – Press **“PROJ OFF”** and the screen will retract.

**STEP 10** - When fully retracted, turn off the main switch.

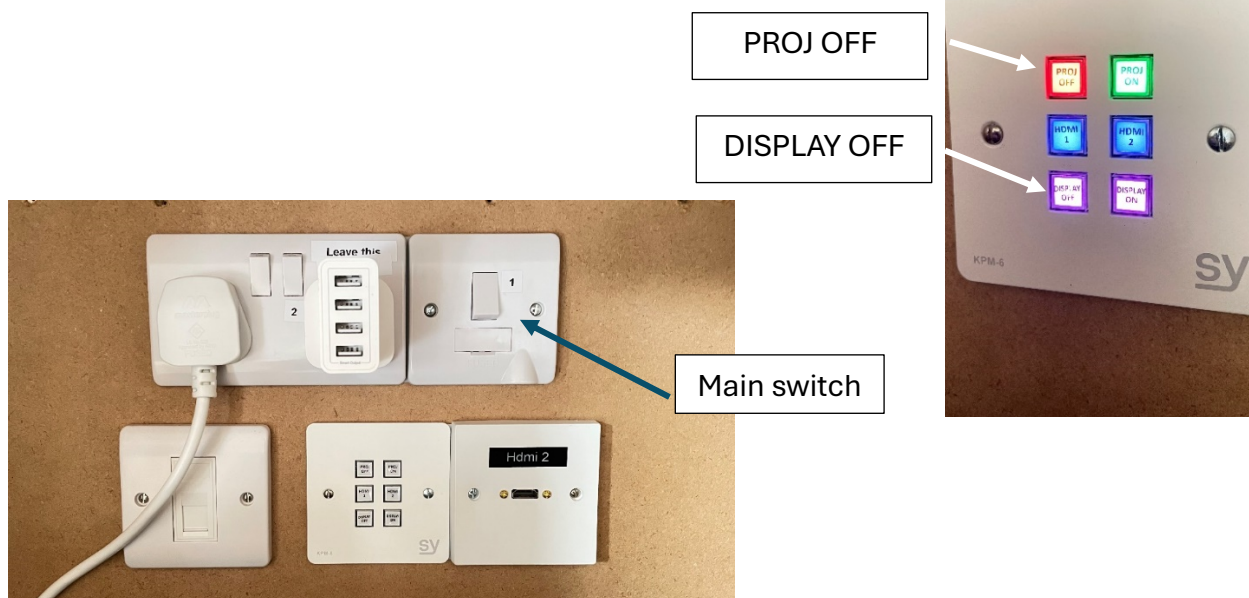


## Fraser Village Hall

# Using the Projector with Wireless connection

Please follow the procedure below when turning off the projector **to prevent serious damage**.


Please do not leave the projector on the same image for a long time to prevent the image being burnt in. Press “**Display Off**” / “**Display On**” to prevent damage.

**STEP 1** - Turn on the Main switch and **wait 5 seconds**.

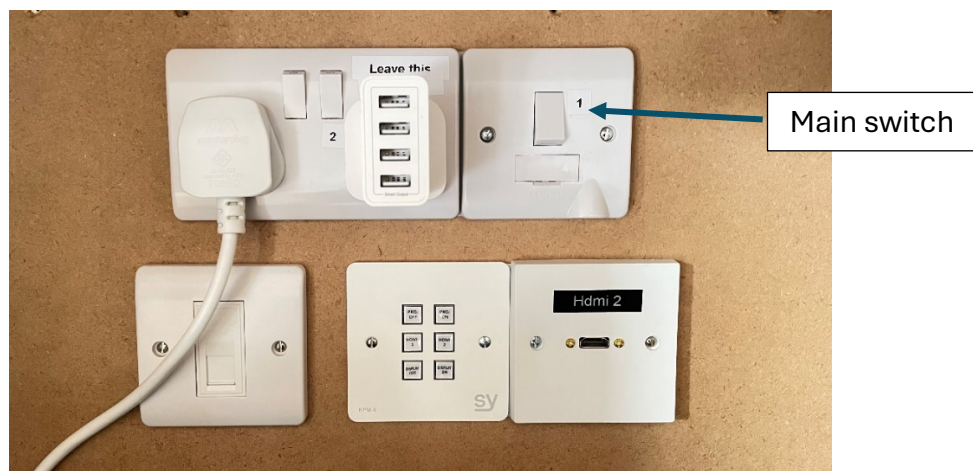


**STEP 2** - Press “**PROJ ON**” – this automatically lowers the screen and turns on the projector. **WAIT** until the screen is fully lowered and the projector is on.


**STEP 3** - Press “**HDMI 2**”.

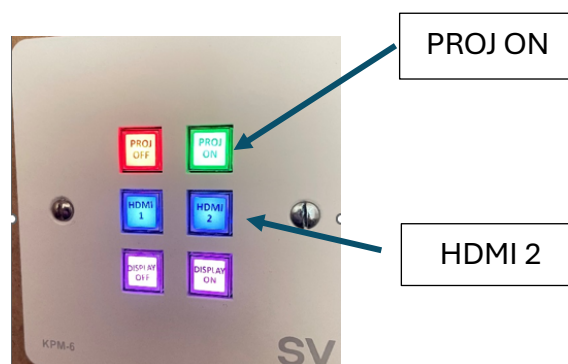

**STEP 4** - Ensure the Wifi dongle is plugged into a USB power port and the HDMI lead is connected into the HDMI 2 port. It should normally be plugged in and left this way.

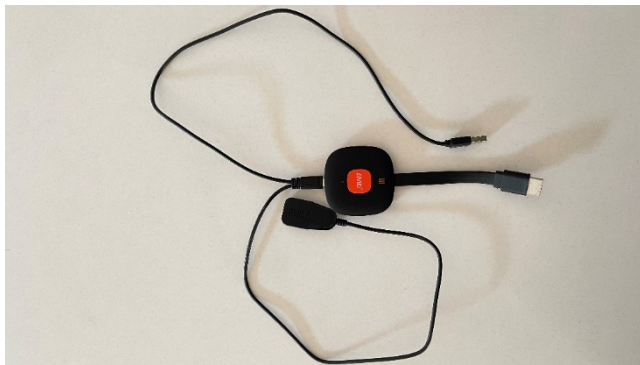

WIFI Dongle

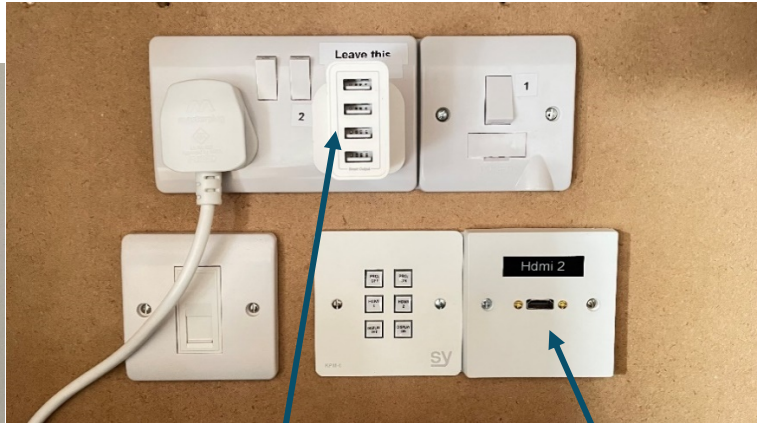

USB ports

HDMI 2 port

**STEP 5** - On screen instructions should appear for most device types. Using your device WIFI settings, connect to WIFI **AMB 286105B2**. The password is displayed on the screen.

**STEP 6** - Use your device settings to project onto the screen.

Should the WIFI signal not appear, a long press (10 seconds) on the dongle will cause it to reset, and after a short delay, the WIFI link should appear.

## Shutting down


**STEP 7** – Press “**DISPLAY OFF**” and wait 2 minutes.

**STEP 8** – Press “**PROJ OFF**” and the screen will retract.

**STEP 9** - When fully retracted, turn off the main switch.

PROJ OFF

DISPLAY OFF

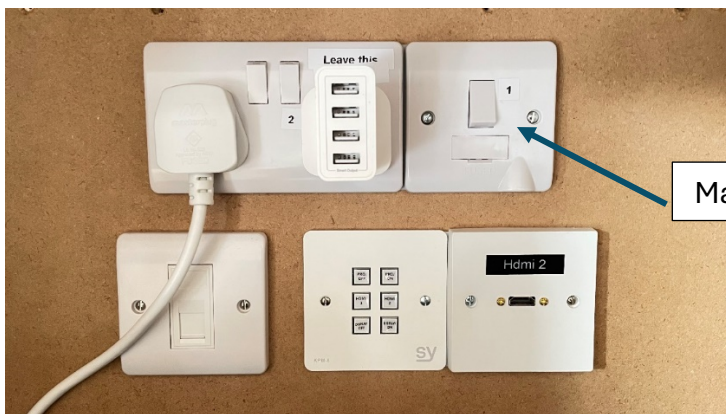

Main switch




# Fraser Village Hall

## Using the Projector with HDMI connection

Please follow the procedure below when turning off the projector **to prevent serious damage.**


Please do not leave the projector on the same image for a long time to prevent the image being burnt in. Press “**Display Off**” / “**Display On**” to prevent damage.

**STEP 1** - Turn on the Main switch and **wait 5 seconds.**

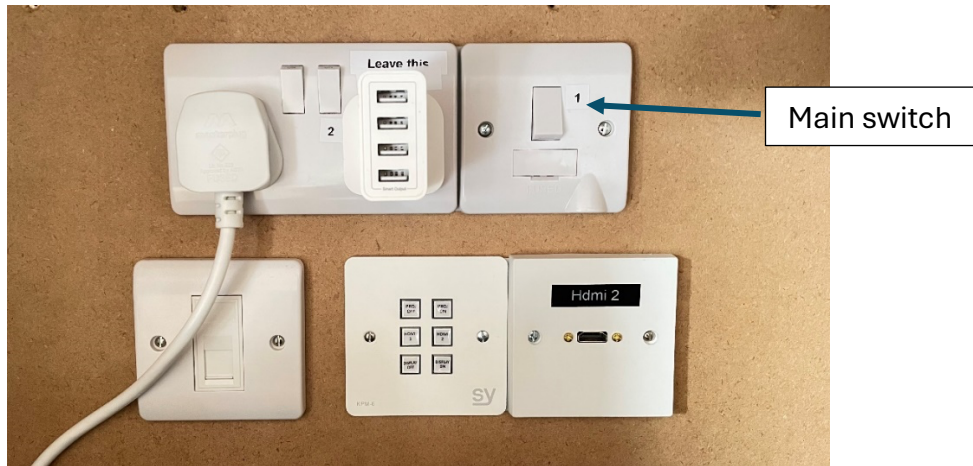

**STEP 2** - Press “**PROJ ON**” – this automatically lowers the screen and turns on the projector. **WAIT** until the screen is fully lowered and the projector is on.

**STEP 3** - Press “**HDMI 2**”.

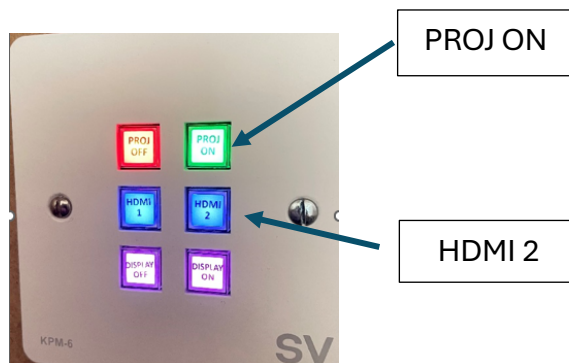

**STEP 4** – Insert HDMI cable into the port **HDMI 2** and connect to the required computer.



HDMI 2 port


**STEP 5** - Use your device settings to project onto the screen as a primary or secondary display .

## Shutting down

**STEP 6** – Press “**DISPLAY OFF**” and wait 2 minutes.

**STEP 7** – Press “**PROJ OFF**” and the screen will retract.

**STEP 8** - When fully retracted, turn off the main switch.

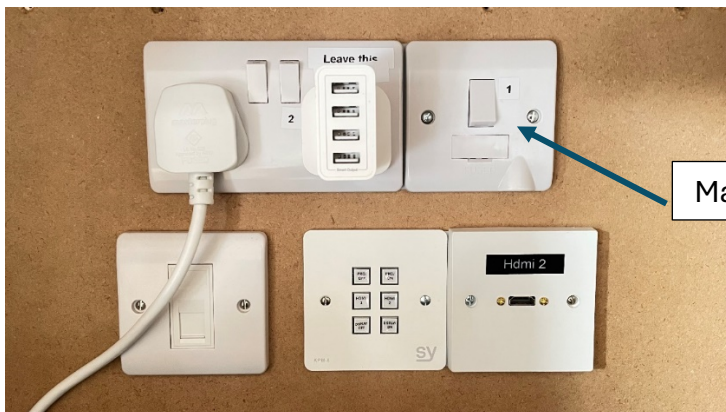

Main switch




PROJ OFF

DISPLAY OFF

# Fraser Village Hall

## Using the AV to stream / play music

**STEP 1** - Turn on the Main switch and **wait 5 seconds**.

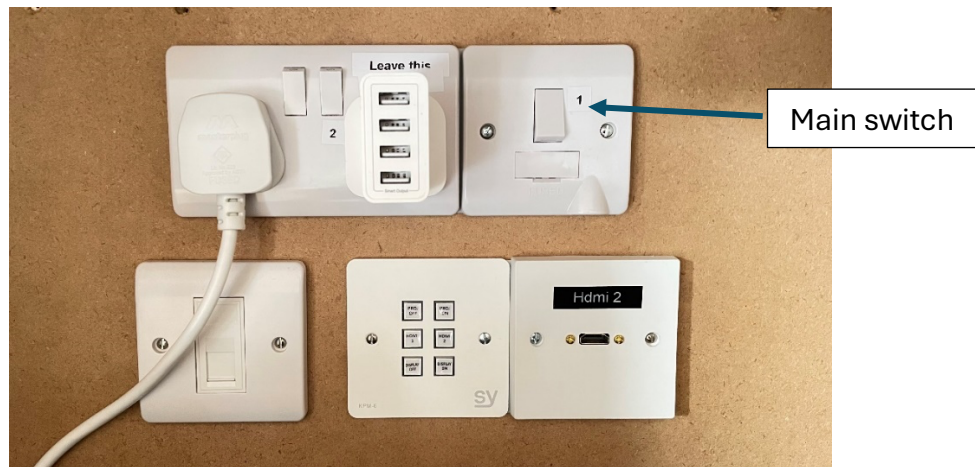

**STEP 2** – Check the amplifier is turned on.



There are various cables and adaptors in the storage boxes to connect devices to the IPOD input.

**STEP 3** – Turn down all volume controls.

**STEP 4** - Connect the sound jacks matching the plug colours to the connectors marked “IPOD”.

**STEP 5** - Connect the device and stream music, adjusting volume to desired level.

## Shutting down

**STEP 6** – Turn down all volume controls.

**STEP 7** – Remove cables.

**STEP 8** – Turn off mains.

Main switch OFF

