



Newbald


Village Hall

facebook.com/newbaldvh

Water Boiler Instructions

Note: Boiler MUST be drained fully after use

- Turn on at wall switch;
- Boiler will automatically start to fill with water and heat up. Display will show WAIT;
- When up to temperature, display shows READY. Water can now be drawn off;
- When finished, turn off machine at wall and drain water as below;
- Remove front panel; check drain hose is connected correctly and place end of hose into a bowl or bucket; open tap and drain fully - Do NOT leave hose to drain unattended as there may be more than a bowl full of water. Carefully pour water down sink (it may be very hot!)
- Close drain tap, carefully coil up hose and replace front panel.

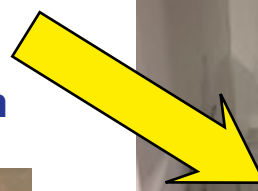



Newbald

Village Hall

facebook.com/newbaldvh

Glass Washer Instructions

- Before use, check the detergent and rinse aid feed-pipes are inserted into the appropriate containers;
- **Machine is only for washing glassware - DO NOT ATTEMPT TO WASH CUPS, CROCKERY OR CUTLERY;**
- Load a single tray with glasses and slide into machine;
- Press On/Off button and wait for machine to finish loading with water. The red light shows the machine is heating - when the red light goes out, press the green start button;
- Wash cycle takes approx 2 minutes, remove tray when finished, loading next tray if required. Wait for red light to go out before pressing start;
- When finished, machine **MUST BE DRAINED:** Remove overflow plug and wait for all water to drain before replacing plug - if outflow is very slow, check grey drain hose underneath machine is not kinked;
- Turn off at wall socket after use.

